



PLAY-BACK SK1 I 1-7 2-4 2-6 5-8 5-9 14-16 15-19 20-22
 RECORDING II 1-3 5-10 11-13 12-14 17-19 18-20 19-21

Conn.	volt.	adapter
1	220V	4-5
2	110V	5-6

3104 106 04-181